



HOME ON THE RANGE CAMPING SET

Thank you for purchasing Home on the Range Camping Set!

Home on the Range Camping Set is an imaginary play toy meant for indoor use. To set up the tripod, push each pole about 1.5" through the slanted holes in the round tripod holder. Make sure the three legs are splayed out to the sides for maximum stability. Fasten the handle of the cookpot to the wood hook hanging from the center of the tripod holder. Slot the two pieces of the flame together and place under the cookpot. Accessories include hot dogs, fish, and corn on the cob, which fit into the pot. The logs can be split in half or into quarters with the pretend axe and positioned around the fire.

We hope you love Home on the Range Camping Set!



WONDER & WISE
BY ASWEETS GLOBAL INC.
P.O. Box 3054, City of Industry CA 91744
wonderandwise.com


MADE IN CHINA

@wonderandwise



HOME ON THE RANGE CAMPING SET

Assembly Instructions

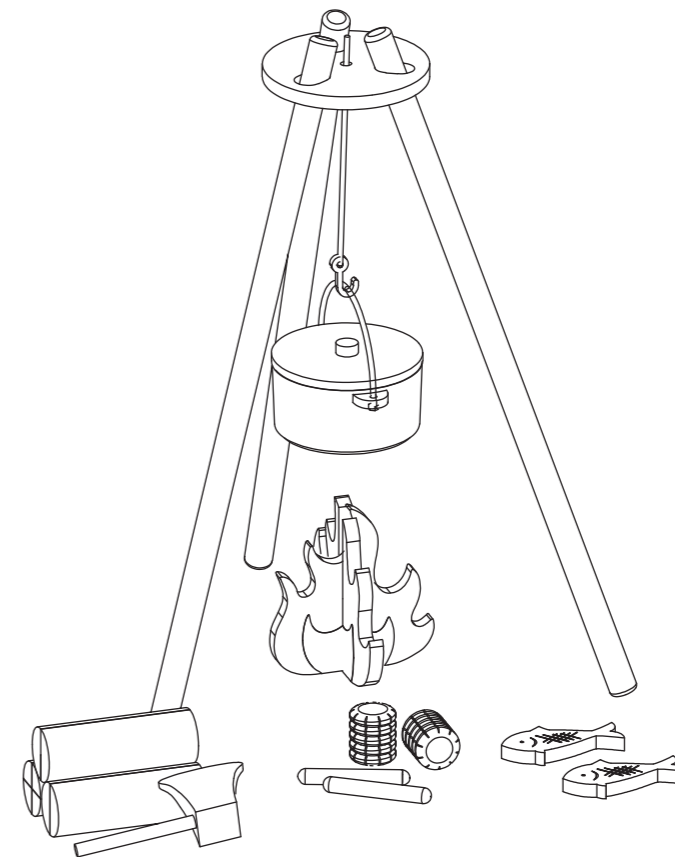

WARNING:
Assembly by an adult.

WARNING:
Keep away from flame.
Adult supervision recommended.
Assembly by an adult.


AVERTISSEMENT:
Garder à l'écart du feu
et ériger sous la surveillance d'un adulte.
Assemblée par un adulte.

ADVERTENCIA:
Mantenga alejado del fuego
y ensamble bajo supervisión de adultos.
Asamblea por un adulto.



P.O. Box 3054
City of Industry CA 91744
T: 626.333.4222
E: info@asweets.com
www.wonderandwise.com

Designed in USA Made in China



Parts

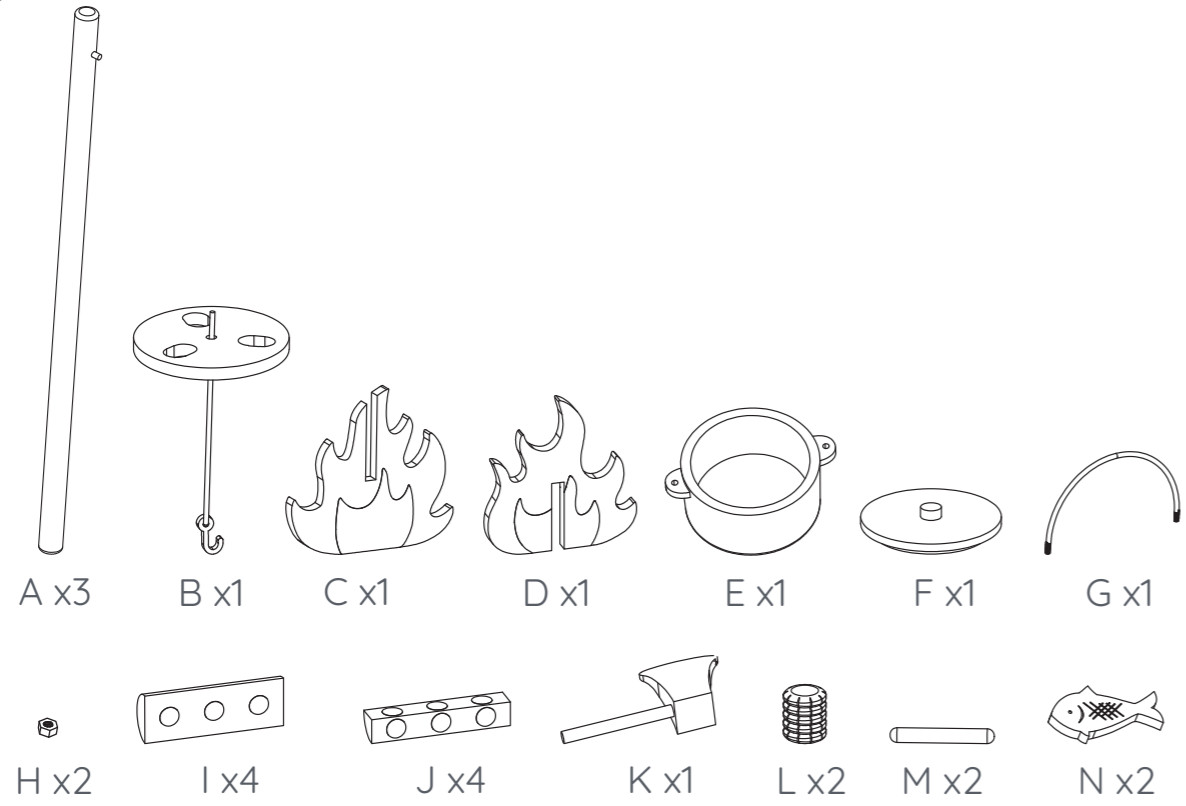

Step 2

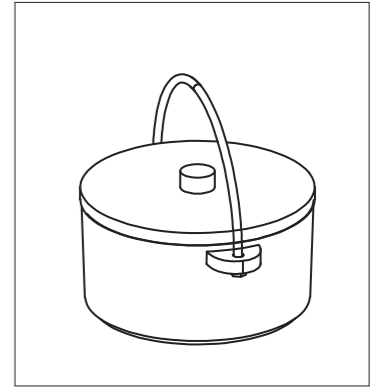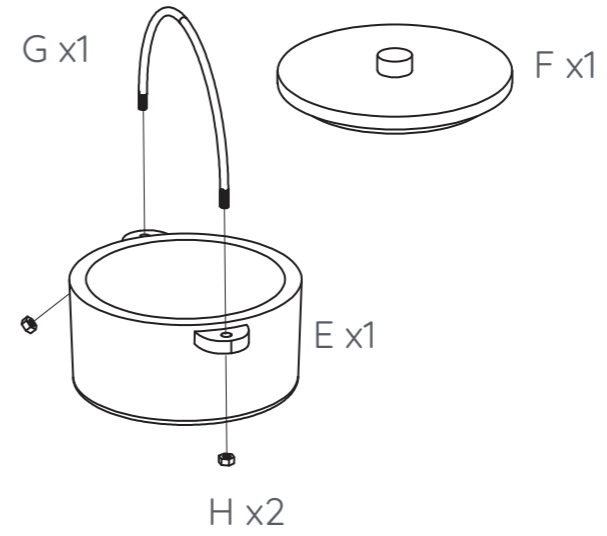

Step 1

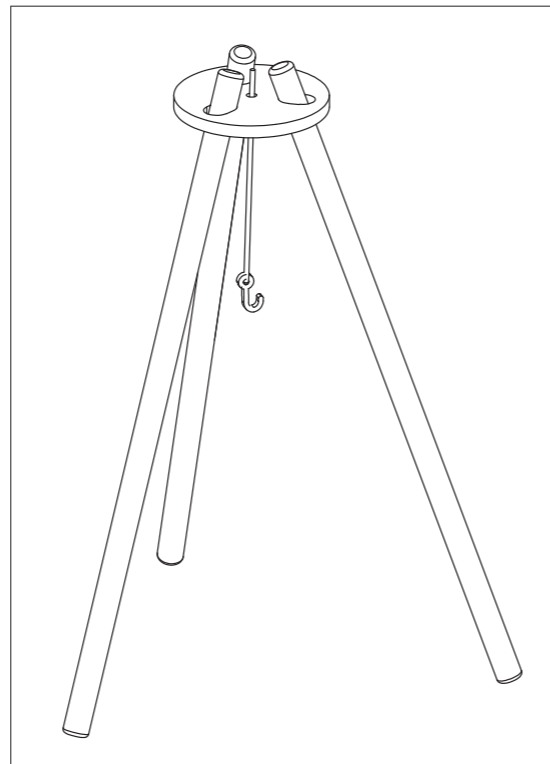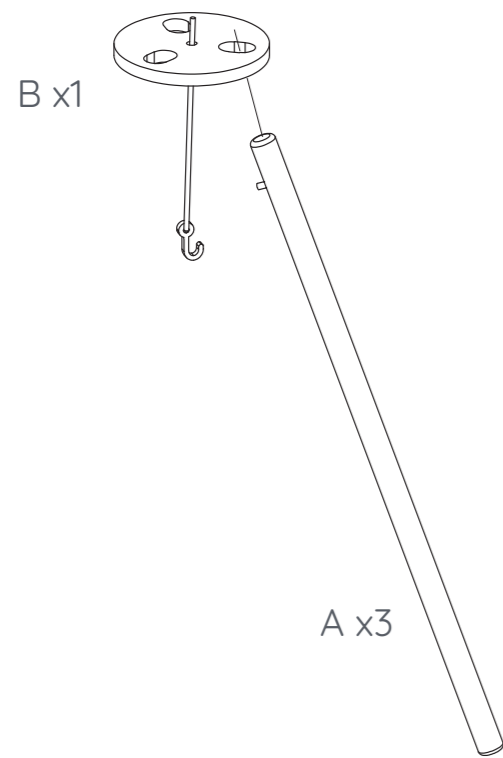

Step 3

